
How To Measure for an Indoor Spear Window Awning



Drop Measurement – How far down you want the awning to come down on the window. Projection Measurement- How far you want the awning to project out from the window. Width – Measure from center to center of desired arm mounting points. Valance- Can be straight, scalloped wave, with trim or without trim.

• Awning arms are mounted standard 4" below 90°. You can request longer arms or mount the standard arms lower or higher. When changing the position of the standard arms, this will change the projection and drop.



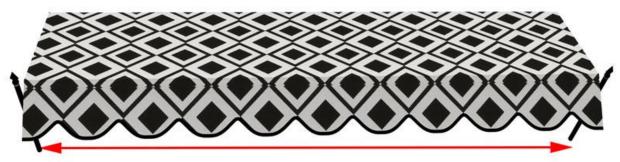

Width is measured from center to center of arms. Arms can be mounted on trim or outside of trim on each side of window.