


Door Awnings - Finding the perfect size

How to measure the width of a Door Awning;

- Measure the door opening, awning should be 8" wider than door opening
- 13 1/2" minimum height required above door for awnings up to 72" wide
- 16 1/2" minimum height required above door for awnings 73" wide and over
- Same quality construction as our window awnings, with extra frame support
- Custom widths available up to 240"

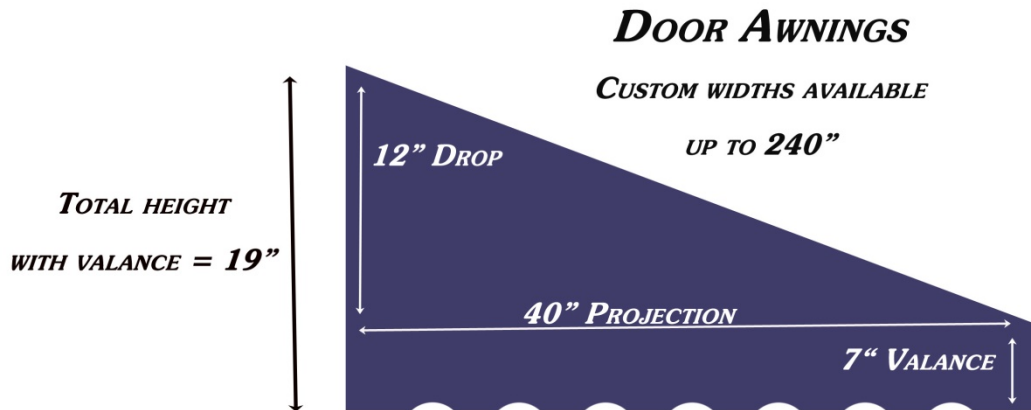

PLEASE NOTE:

DOOR AWNINGS ARE ONLY AVAILABLE IN A 40\" PROJECTION

DOOR AWNINGS ARE NOT RETRACTABLE