


When Measuring, overlap onto door frame at least 1" to allow installation of screw studs for snaps.

## Door Panel- Handle on Left

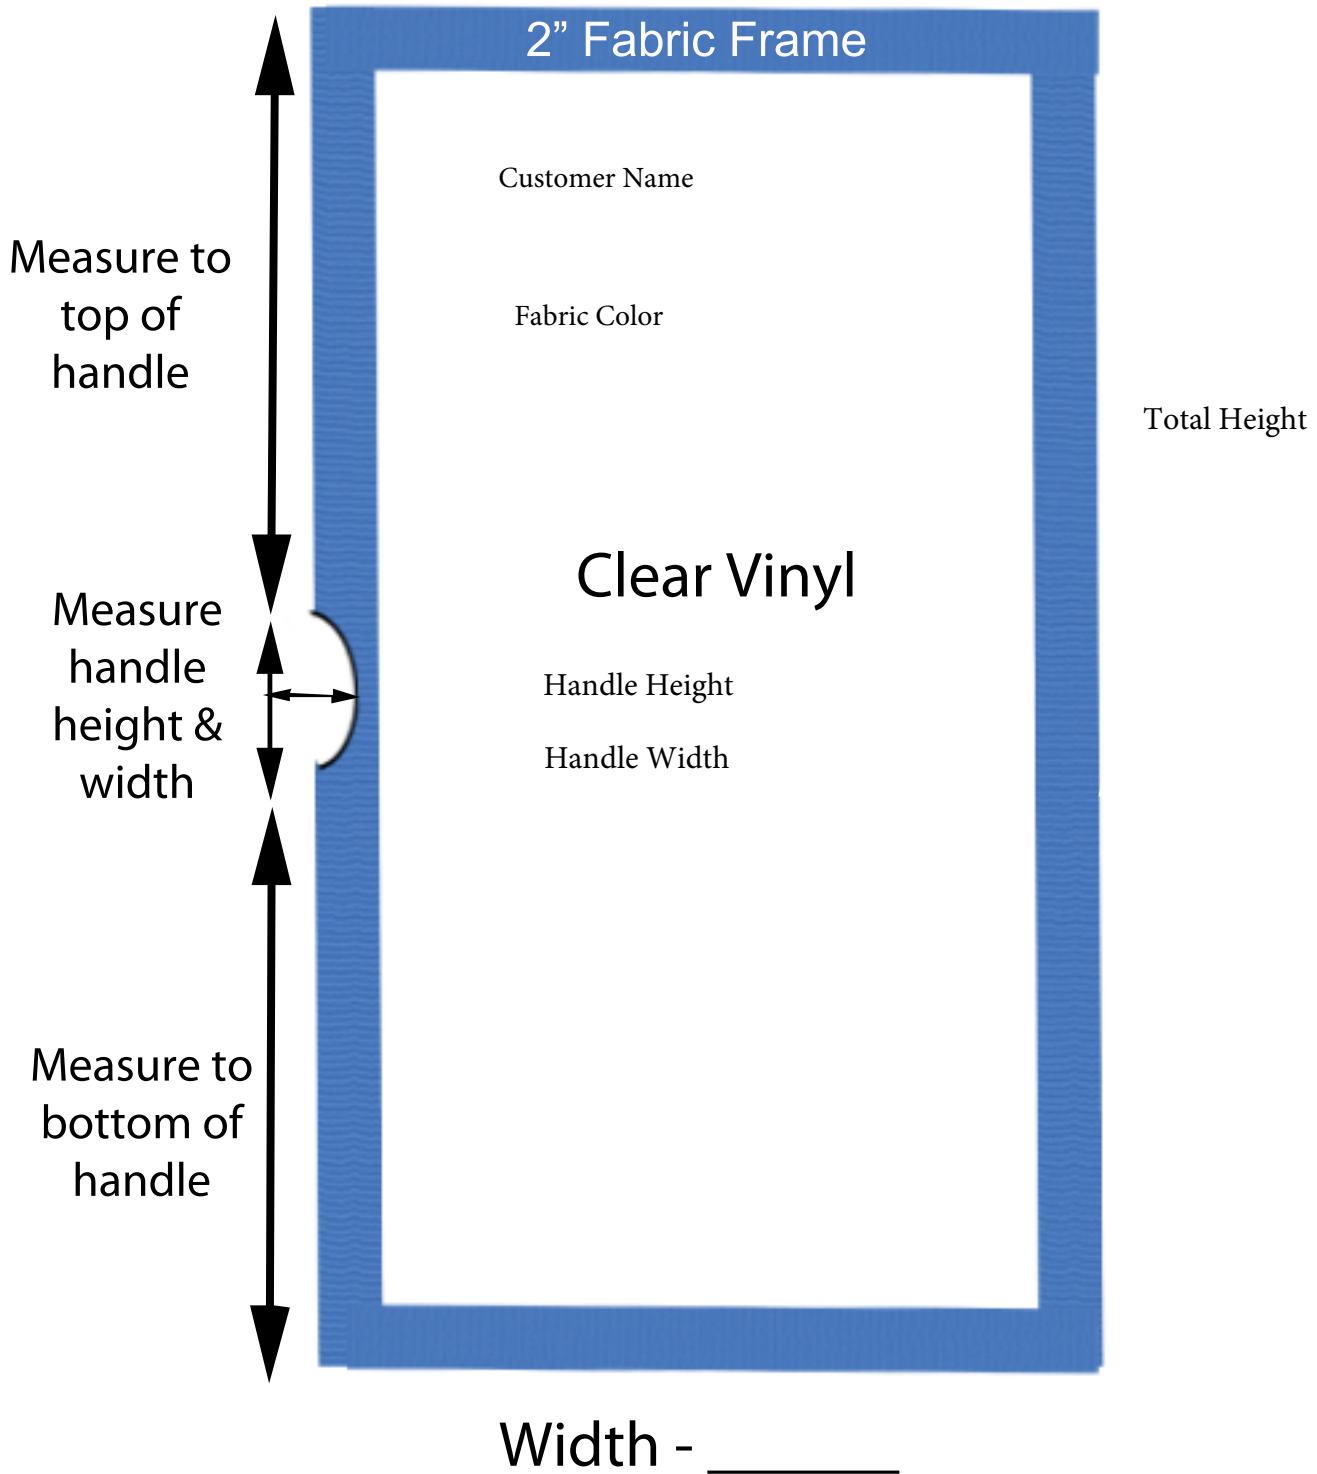

Measure door handle to allow for a cut-out in the door panel cover as shown on the left.