


PORCH VALANCE INSTALLATION INSTRUCTIONS

1. INSTALL HEADROD CLAMPS 3" IN FROM EACH END OF VALANCE.
2. INSTALL EXTRA HEADROD CLAMPS EVENLY THROUGHOUT WIDTH OF VALANCE.
3. IF HEADROD HAS BEEN CUT FOR SHIPPING, USE COUPLINGS PROVIDED TO CONNECT HEADROD INTO ONE LENGTH.
4. SLIDE FIBERGLASS HEADROD THROUGH POCKET ON TOP OF THE VALANCE.
5. INSERT INTO HEADROD CLAMPS AND TIGHTEN WING NUTS.

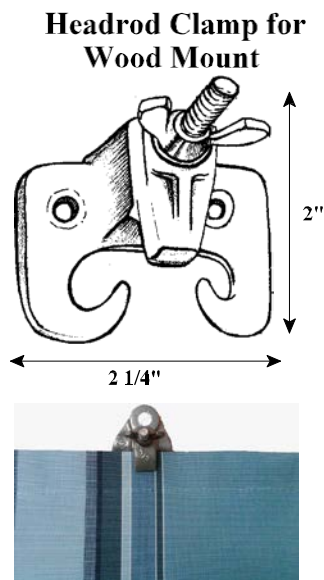

Above view should be from inside the porch so no hardware shows on the outside.

If you have any questions call PYC Awnings at 1-800-933-6936