
Indoor Café Awning Installation Instructions




1. Mount headrod brackets 3 ½" in from each side of the awning width. These locations will be at the top of the arch opening on the backside of the fabric.

- There will be extra arch openings and brackets for wider awnings.



Headrod Bracket

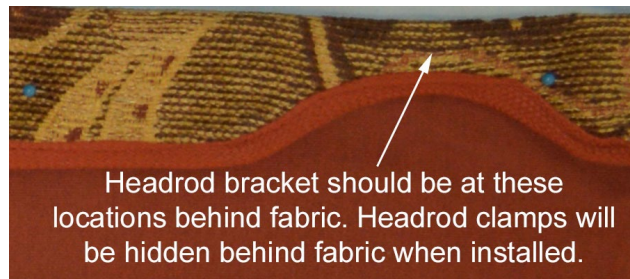

2. Slide the headrod in the top pocket.
3. Slide the front bar through the lower pocket in the fabric above the valance.
4. Screw the arms to the front bar. Hinges and screws will be on the arms.
5. Place the top of the awning with the fiberglass headrod inside the pocket on the headrod brackets. The brackets should be hidden behind the fabric.
6. Let arms hang down while installing arm hinges. Hinges will be attached to the arms- remove to install.
7. Mount hinges 4" below perpendicular. This will be your drop measurement plus 4 inches. Distance between center of hinges will be the width of awning you ordered.
8. Arms can mount at any desired position. This will change the drop and projection of the fabric.



Hinge