

# PYC AWNINGS

EST



1987

## Spear Window Awnings – Finding the Perfect Size

### Measure the Width of the Awning

A - Measure the width where you will mount the hinges for the awning.

- This measurement can either be on the window trim or outside of the window trim.
- The awnings are custom made to any width.
- The width does not have to be exact but should be within 1" of your desired mounting points.



### Measure the Projection and Drop of the Awning

B – The projection is how far out the awning will be from the house perpendicularly.

C- The drop is from the top of the awning to 90°. Our standard arms mount 6" below 90°.

D- The 8" valance is the fabric that hangs below the frame. The valance can be straight or have a scalloped/wave bottom.

- The drop and projection will be the same measurement to allow the awning to retract.
- The drop and projection are a personal preference depending on how much of the window you want covered.
- As a rule of thumb for the best sun protection, you would cover half of the window.
- For custom arm lengths, please see mounting options PDF, or email us.

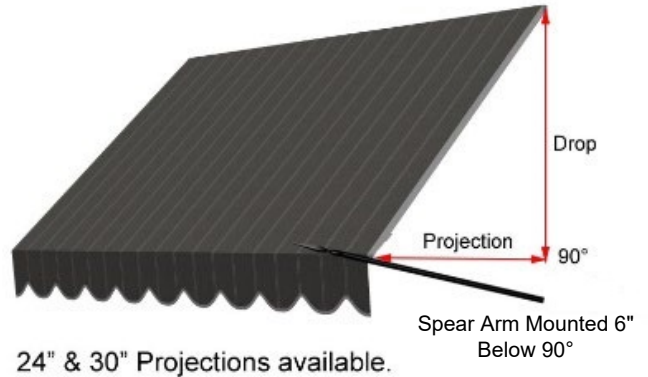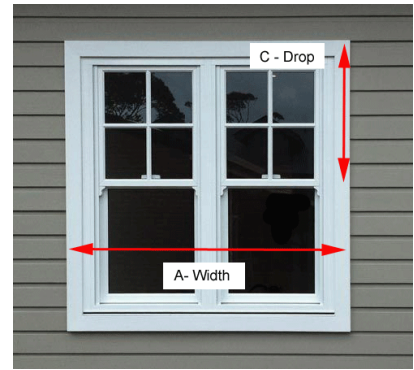

24" & 30" Projections available.

Drop will be the same as the projection measurement.



Wall Hinge



Top Track  
(Fabric hides track when installed)  
Available in White or Black



Classic Spear Finial  
Custom Cut, Welded and Painted.  
Real Wrought Iron