

Door Awnings – Finding the Perfect Size

- A. Measure the width where you will mount the hinges on each side of the door trim or wall.
 - Awning must be 8" wider than door opening to allow the door to open outward.


- B. Locate the mounting point where you will mount the top of the awning.
 - Minimum mounting height above door opening for awnings 71" wide and under is **13 1/2"** to allow the door to open outward.
 - Minimum mounting height above door opening for awnings 72" wide and over is **16 1/2"** to allow for center frame supports and to allow the door to open outward.
 - From the top mounting point 12" down is where the arm of the awning will be located.
 - The 7" valance will hang below the frame.




- C. Door awnings are not retractable.
- D. Custom Widths up to 216".

PYC Door Awning Frames



71" Wide & Under

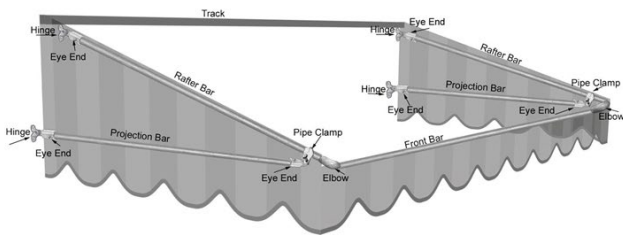

72" - 95" Wide

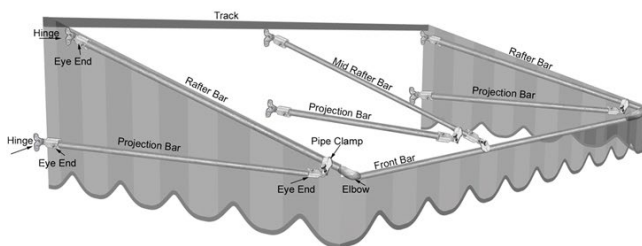

96" Wide & Over

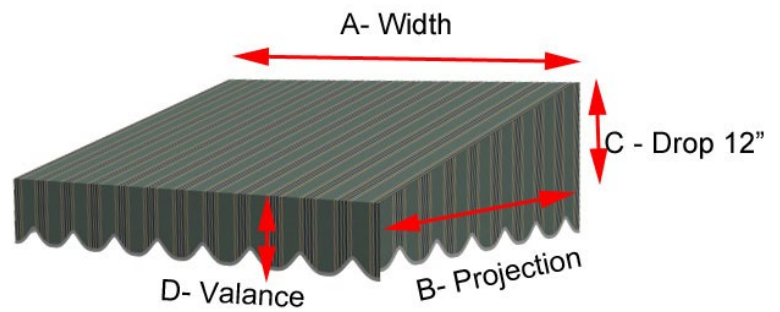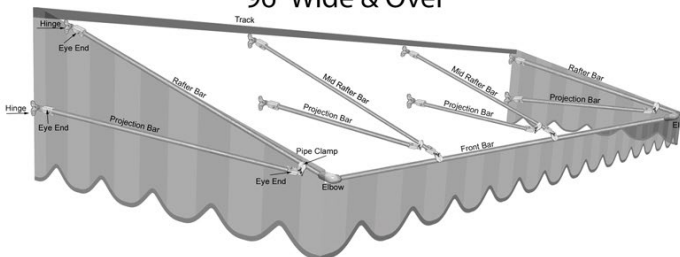

Height = Drop 12" + Valance 7" = 19" Total Height



PYC Awnings
sales@pycawnings.com
 800-933-6936

