

Tools Needed

Tape Measure


1/8" Drill Bit (pilot holes)

#2 Phillips Screwdriver



Porch Valance Installation Instructions

1. Determine where the width of the valance will be installed and mark each end with a pencil.
2. Install a headrod clamp 3" in from each end (pencil marks) of the valance.
3. Install remaining clamps evenly throughout the width of the valance measuring clamps so they are on a level plane.
4. If white 1/2" Fiberglass Headrod is cut into sections for shipping, use coupling provided to connect the sections together into one length. Use gorilla glue or similar glue to ensure coupling remains in place.
5. Slide Fiberglass Headrod through pocket on the top of the valance.
6. Loosen wingnuts and insert the valance with headrod inside the pocket into clamps.
7. Leave wingnuts slightly loose.
8. With wingnuts loose, you can slide valance back and forth until it is in the correct position.
9. When valance is in correct position, tighten wingnuts.

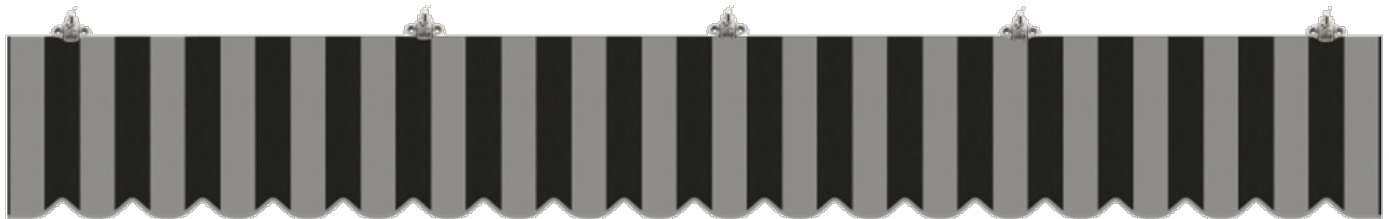

Above view should be from the inside of the porch so no hardware shows from the outside.

Questions? Call PYC Awnings 800-933-6936