

# PYC AWNINGS

EST

MADE IN THE USA

1987



## How to Measure for Retractable Awning Replacement Fabric


*Order Fabric Size as shown below. The size you order will be the FINISHED FABRIC SIZE.*

*PYC does NOT add or subtract for allowances.*

All covers are sewn to your specifications with new insert sewn into the fabric pockets.

The new covers will be ready to install.

The Valance is included with the main cover.

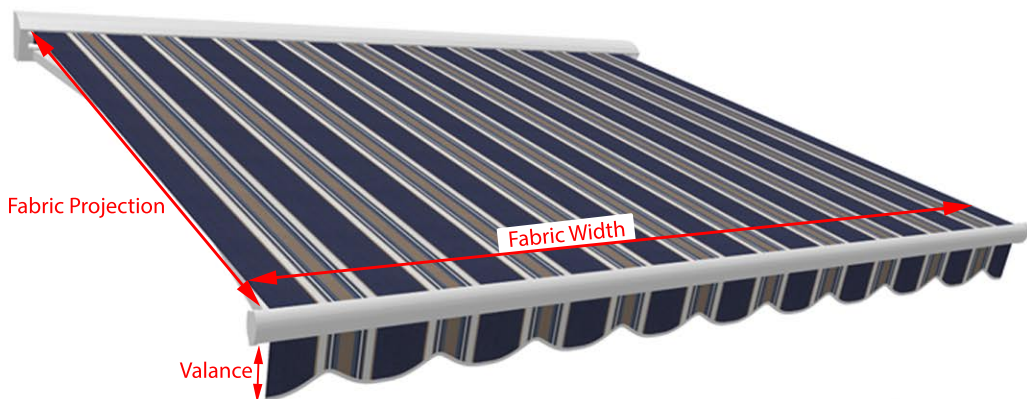

A- Measure the width of the existing fabric. Fabric will be smaller than the frame width.

B- Measure the projection of the fabric while frame is fully extended. Then **add 8" -12"** to allow extra wraps to stay on the roller tube when fully extended.

\* This measurement does not need to be exact.

C- Measure height of Valance. Normally this is 6" -8".

**PYC does NOT add or subtract for allowances.  
The size you order will be the finished fabric size.**